

Things To Know Before You Start!

- Be sure all power is OFF from the panel to the installation location.
- Access to the pedestal is gained by sliding one section up and down, see complete details below.
- DO NOT use power tools to lock or unlock the pedestal, use a 5/32" hex wrench ONLY!
- Keep all fingers, wires etc. clear of both the cap and the base when closing the pedestal.

IP3 BASIC Pedestal Options/Configurations:

The IP3 BASIC Pedestal line is available with different options, the IPLC Control is NOT included in this line. The enclosed pedestal will reflect what you have ordered.

-Heights Available 15" or 29"

-FS mount option comes with a pre-cut FS standard mount opening with screw holes for the receptacle and while-in-use cover. Note the receptacle and while-in-use cover is NOT included.

-NO accessory deck or din rails

-4 Mounting Rings and 4 Stainless Steel Washers (mounting bolts and nuts not included)



Mounting Rings In Place

Mounting The Enclosure:

The IP3 Pedestal is anchored using the universal mounting rings provided allowing for a wide range of bolt patterns from 6" to 7" spacing. Standard bolt size is 5/8". To mount, position the enclosure over the mounting bolts in the concrete base and place the mounting rings over the bolts rotating them until they fit in place. Install the stainless steel washers provided over the bolts and finger snug the mounting nuts (not included) before tightening.




5/32" Hex Wrench Used To Lock/Unlock Pedestal

Access To The Enclosure:

Only the section with the visible Hex Socket Screws slides up and down for installation and service of the pedestal. **DO NOT USE POWER TOOLS TO LOCK OR UNLOCK.** A 5/32" Hex wrench is used (not included) to lock or unlock the enclosure. Turn the screws CLOCKWISE as far as possible to unlock the pedestal and COUNTER CLOCKWISE to lock. *Using power tools on these screws will strip them and they can not be replaced on site!*

Side View Of Open Pedestal

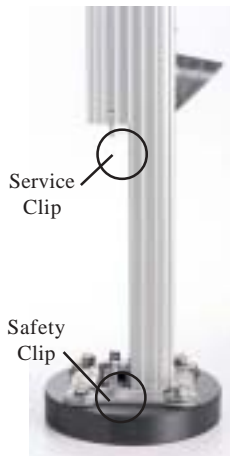

To Close: Using the FS opening as a hand hold, lift the front section slightly to release the pressure on the service clip, push the clip in and slowly slide the front down past the clip. Continue to slide down slowly, stopping at the safety clip. *Check to be sure all fingers, wires etc. are free of the cap and base before proceeding.* Once clear, push in the safety clip and slowly slide the front down to the base. Using both hands squeeze in around the sides of the top just below the cap and firmly push the front down into place on the base. Lock the pedestal (using a hex wrench ONLY) by turning the screws counter clockwise until flush with the outside surface.

To Open: This pedestal has been shipped in the unlock position and is ready to open. Using the FS opening as a hand hold carefully slide the front section of the enclosure up past both the safety clip and the service clip. The top cap of the pedestal moves with this section.

CAUTION: This clip is designed to keep the front section from falling down however DO NOT apply pressure or place anything heavy on the top of the pedestal when open or in the service position.



Use CAUTION When Installing This Product

To prevent severe shock or electrocution always turn the power OFF at the service panel before working with wiring. Installation and service to be performed by a qualified installer.

Warranty & Disclaimer: The IP3 has a 3 year warranty on material and workmanship. This covers normal use of the product only and does not cover abuse, accidental damage or vandalism. The manufacturer is not responsible for the proper use and installation of this product. The manufacturer is not responsible for any costs for installation or removal of this product for any reason.



Enclosure Type 3R